

## COMPONENT LOCATIONS

### AIR CONDITIONING/HEATER/AUXILIARY FAN

		Page-Figure
A/C Compressor Clutch .....	Lower LH front of engine .....	207-3
A/C Compressor Low Pressure Cut-Out Switch ....	On receiver drier .....	201-1
A/C Relay .....	Top of LH front wheel well, in relay box	
Ambient Temperature Sensor	Behind upper console	
Auxiliary Fan Motor .....	Front of radiator	
Auxiliary Fan Relay .....	Top of LH front wheel well, in relay box .....	201-2
Blower Motor .....	Above passenger's footwell .....	208-1
Blower Resistors .....	Above passenger's footwell, in fresh air duct	
Blower Switch .....	On upper console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Receiver Drier Temperature Switch .....	On receiver drier, behind RH headlights .....	201-1
Switch-Over Valve .....	Behind upper console	
C134 (4 pins) .....	Above LH side of passenger's footwell .....	208-1
C154 (1 pin) .....	Above passenger's footwell	
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1

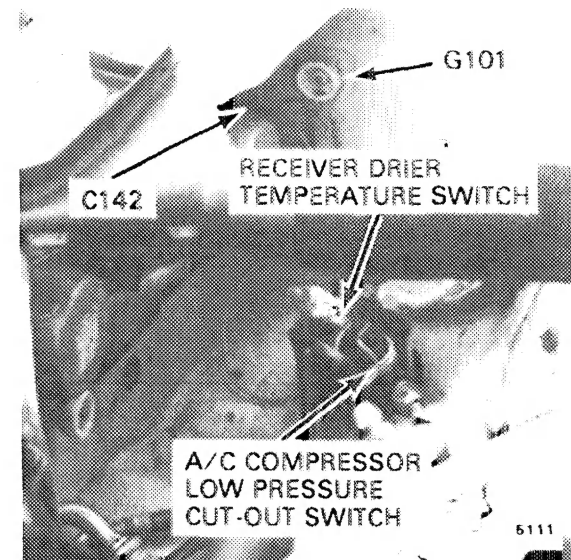


Figure 1 - Behind RH Headlight Assembly

### BACKUP LIGHTS/TRANSMISSION KICKDOWN/GLOVE BOX LIGHT

Backup/Neutral Safety Switch .....	Base of manual transmission shifter	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Kickdown Solenoid .....	RH front of transmission .....	206-2
Kickdown Switch .....	Under accelerator pedal	
Starter Lockout/Backup Light Switch .....	LH side of automatic transmission .....	208-3
C104 (14 pins) .....	To right of parking brake support .....	205-2
C146 (4 pins) .....	Beside upper console, above accelerator	208-2
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

### CENTER CONSOLE ILLUMINATION

Blower Switch .....	On upper console	
Fiber Optic Light Sources ....	Behind upper console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Warning Switch/Flasher .....	On center console	
Light Switch .....	Instrument panel, left of steering column	
G102 .....	Behind instrument cluster .....	202-1

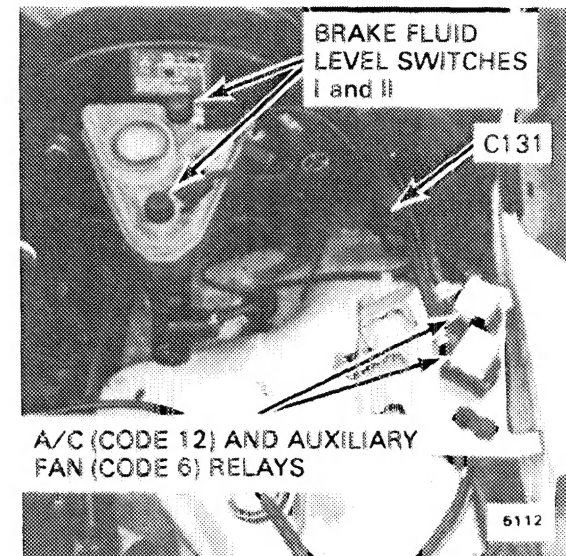


Figure 2 - Behind LH Front Wheel Well

## COMPONENT LOCATIONS

202  
240  
0

### CHARGING SYSTEM

		Page-Figure
Alternator .....	Front of engine	
Battery .....	RH rear of engine compartment	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Light Switch .....	Instrument panel, left of steering column	
Starter Assembly .....	Lower RH rear of engine	
G100 .....	RH front fender, ahead of battery .....	206-1

### CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay .....	Behind LH rear wheel well.....	202-2
Antenna Switch .....	On upper console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
In-Line Radio Fuse .....	In upper console behind radio	
C135 (6 pins).....	Behind LH rear wheel well	
C148 (2 pins).....	Behind rear of ash tray	
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2

### COURTESY LIGHTS

Door Switches .....	In each door jamb	
Front Dome Light and Switch .....	Above rear view mirror assembly	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Dome Light Switch .....	On upper console	
Warning Module .....	To right of parking brake support .....	205-2
G102 .....	Behind instrument cluster .....	202-1

### HEADLIGHTS/FOG LIGHTS

Combination Switch .....	Upper LH side of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins).....	Behind LH headlight assembly	
C142 (4 pins).....	Behind RH headlight assembly .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1

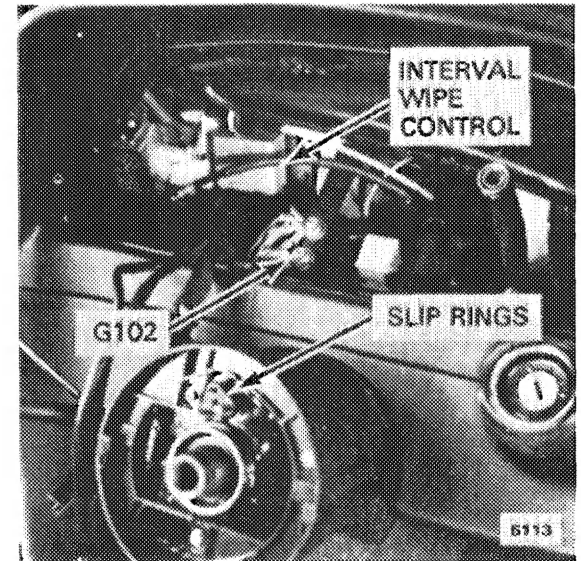


Figure 1 - Behind Instrument Cluster

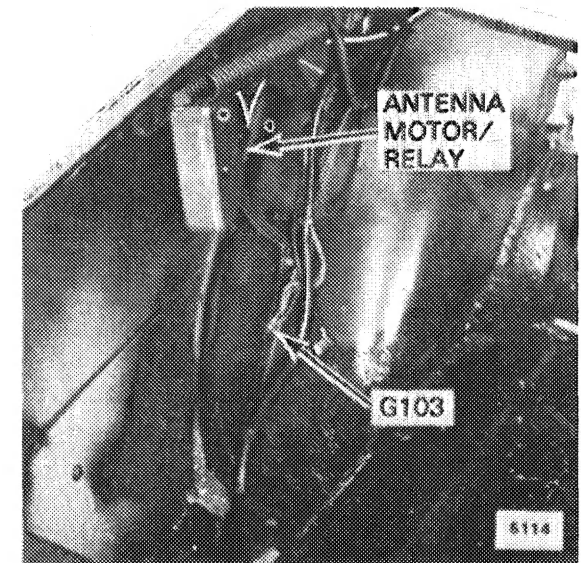


Figure 2 - Behind LH Rear Wheel Well

## COMPONENT LOCATIONS

### HEATED SEATS

		Page-Figure
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Seat Heaters .....	In each seat cushion	
Seat Heater Switches .....	In center console	
G102 .....	Behind instrument cluster .....	202-1

### HORNS/SLIDING ROOF

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Horn Switch .....	In steering wheel	
Sliding Roof Motor .....	In trunk, above LH wheel well	
Sliding Roof Switch .....	On upper console	
Slip Rings .....	Behind center of steering wheel .....	203-2
Washer Motor .....	Bottom of washer fluid reservoir, behind LH headlights	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins) .....	Behind LH headlight assembly	
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1

### LIGHTS: MARKER/LICENSE/TRUNK

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C104 (14 pins) .....	To right of parking brake support .....	205-2
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

### LIGHTS: PARK/TAIL

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C104 (14 pins) .....	To right of parking brake support .....	205-2
C141 (4 pins) .....	Behind LH headlight assembly	
C142 (4 pins) .....	Behind RH headlight assembly .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

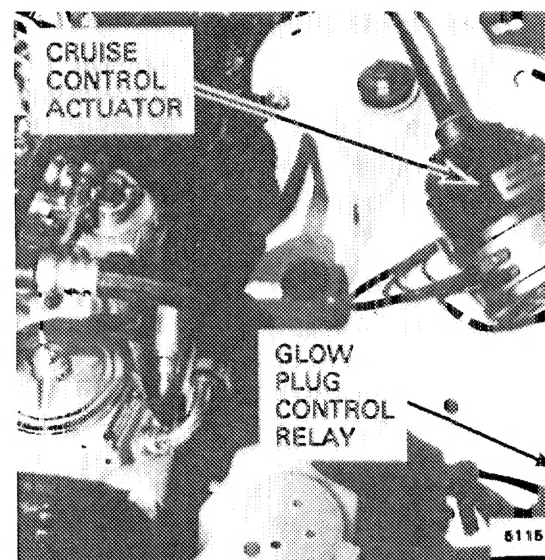


Figure 1 - Ahead of LH Front Wheel Well

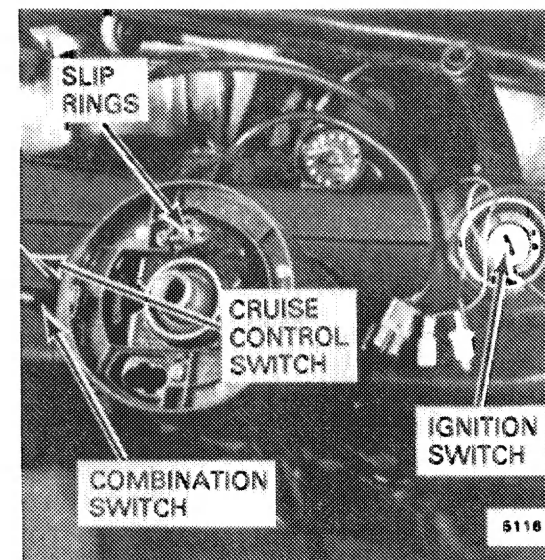


Figure 2 - Top of Steering Column

## COMPONENT LOCATIONS

### POWER DISTRIBUTION

		Page-Figure
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Light Switch .....	Instrument panel, left of steering column	
Starter Assembly .....	Lower RH rear of engine	
C104 (14 pins) .....	To right of parking brake support .....	205-2
G100 .....	RH front fender, ahead of battery .....	206-1

### POWER WINDOWS

Console Switch Group .....	On center console	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Window Switches .....	Below each rear window	
Window Motors .....	Below each window .....	207-2
Window Relay .....	Behind instrument cluster .....	204-2
C107 (6 pins) .....	Under console	
C108 (2 pins) .....	Under console	
G102 .....	Behind instrument cluster .....	202-1

### PRE-GLOW SYSTEM

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Glow Plug Control Relay .....	Behind LH headlights .....	203-1
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Starter Assembly .....	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch .....	LH side of automatic transmission .....	208-3
Washer Motor .....	Bottom of washer fluid reservoir, behind LH headlights	
C130 (6 pins) .....	Connected to glow plug control relay	
C137 (6 pins) .....	Connected to glow plug control relay	
C141 (4 pins) .....	Behind LH headlight assembly	
C146 (4 pins) .....	Beside upper console, above accelerator .....	208-2
G100 .....	RH front fender, ahead of battery .....	206-1
G102 .....	Behind instrument cluster .....	202-1

### REAR DEFOGGER

Fuse Box .....	LH rear corner of engine compartment .....	100-1
Rear Defogger Switch .....	On upper console	
Rear Defogger Timer Relay ..	Behind LH side of instrument cluster .....	204-2
C104 (14 pins) .....	To right of parking brake support .....	205-2
G102 .....	Behind instrument cluster .....	202-1
G104 .....	Ahead of RH rear light assembly .....	204-1

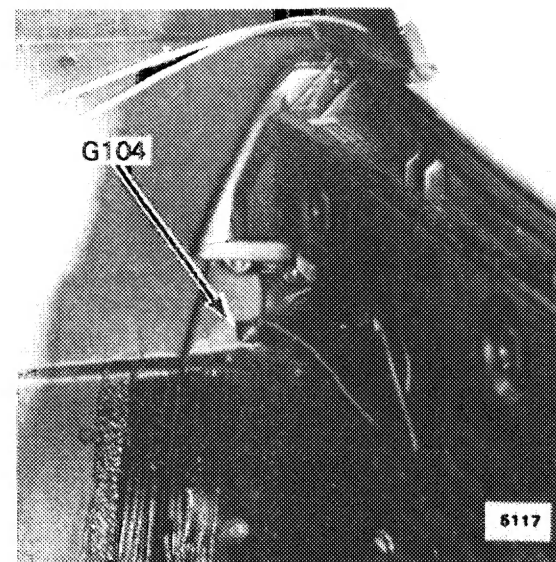


Figure 1 - Ahead of RH Rear Lights

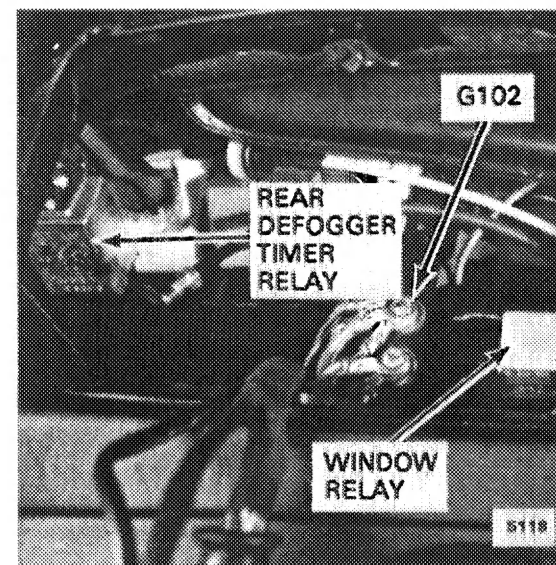


Figure 2 - Behind Instrument Cluster



## COMPONENT LOCATIONS

### START/STOP (IGNITION SWITCH)

		Page-Figure
Fuel Shutoff Diaphragm .....	Rear of fuel injection pump .....	207-4
Ignition Switch .....	Instrument panel, right of steering column ....	205-1
Light Switch .....	Instrument panel, left of steering column	
Starter Assembly .....	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch .....	LH side of automatic transmission .....	208-3
C146 (4 pins) .....	Beside upper console, above accelerator	208-2
G100 .....	RH front fender, ahead of battery .....	206-1

### STOPLIGHTS/CRUISE CONTROL

Brake Switch .....	Top of brake pedal support .....	205-2
Clutch Switch .....	On clutch pedal support	
Cruise Control Actuator .....	On front part of LH front wheel well .....	203-1
Cruise Control Amplifier .....	To left of brake pedal support .....	205-2
Cruise Control Switch .....	Upper LH side of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Vehicle Speed Sensor .....	Mounted on rear of speedometer .....	208-4
C104 (14 pins) .....	To right of parking brake support .....	205-2
C113 (2 pins) .....	Above clutch pedal	
C114 (2 pins) .....	Above clutch pedal	
C140 (6 pins) .....	Behind LH side of instrument panel, above steering column .....	208-2
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

### TURN SIGNAL/HAZARD LIGHTS

Combination Switch .....	Upper LH side of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Hazard Warning		
Switch/Flasher .....	On center console	
C104 (14 pins) .....	To right of parking brake support .....	205-2
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C141 (4 pins) .....	Behind LH headlight assembly	
C142 (4 pins) .....	Behind RH headlight assembly .....	201-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2
G104 .....	Ahead of RH rear light assembly .....	204-1

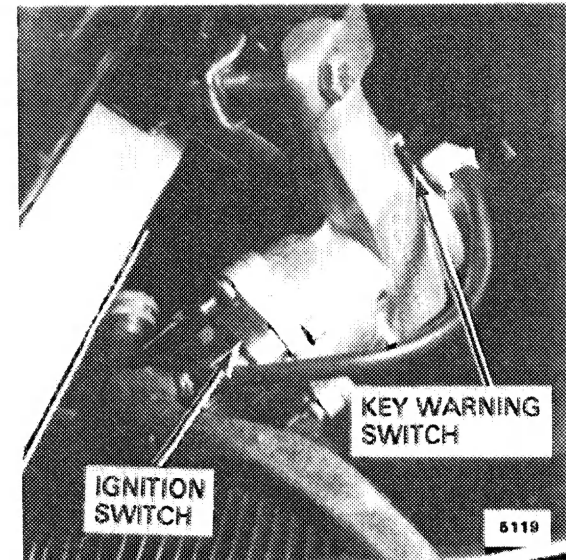


Figure 1 - Ignition Switch (As Seen From Below)

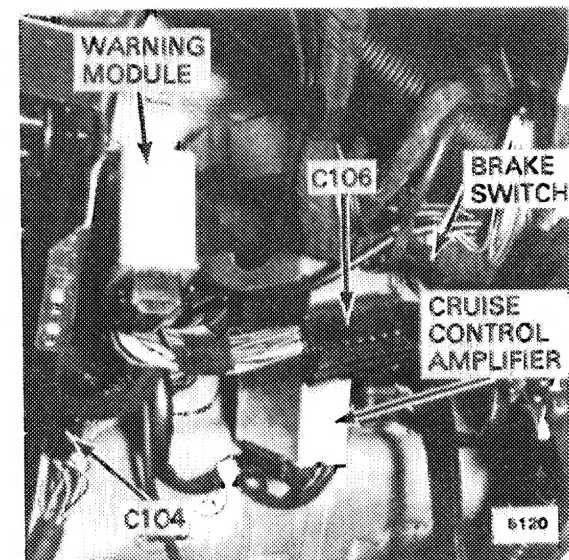


Figure 2 - To Left of Steering Column

## COMPONENT LOCATIONS

### WARNING INDICATORS GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION

Page-Figure

Brake Wear Sensors .....	In each front brake pad	
Coolant Temperature Sender	Left center of engine cylinder head .....	207-4
Fuel Gauge Sender .....	Under first aid kit tray	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Light Switch .....	Instrument panel, left of steering column	
C104 (14 pins) .....	To right of parking brake support .....	205-2
C131 (2 pins) .....	Beside power brake master cylinder .....	201-2
C132 (2 pins) .....	Between battery and RH front wheel well .....	206-1
G101 .....	RH front fender, behind headlights .....	201-1
G102 .....	Behind instrument cluster .....	202-1
G103 .....	In trunk, on rear of LH wheel well .....	202-2

### WARNING SYSTEM

Brake Fluid Level		
Switches .....	Brake fluid reservoir .....	201-2
Door Switches .....	In each door jamb	
Driver's Seatbelt Switch .....	Part of driver's seatbelt assembly	
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Key Warning Switch .....	Part of ignition switch .....	205-1
Parking Brake Switch .....	On parking brake support	
Warning Module .....	To right of parking brake support .....	205-2
C104 (14 pins) .....	To right of parking brake support .....	205-2
C131 (2 pins) .....	Beside power brake master cylinder .....	201-2
C166 (2 pins) .....	Under driver's seat	
G102 .....	Behind instrument cluster .....	202-1

### WIPER/WASHER

Combination Switch .....	Upper LH side of steering column .....	203-2
Fuse Box .....	LH rear corner of engine compartment .....	100-1
Interval Wipe Control .....	Behind LH side of instrument cluster .....	202-1
Washer Motor .....	Bottom of washer fluid reservoir, behind LH headlights	
Wiper Motor .....	In center of fresh air duct	
C106 (14 pins) .....	To left of brake pedal support .....	205-2
C112 (6 pins) .....	To upper right of power brake booster .....	207-1
C141 (4 pins) .....	Rear of LH dual beam headlight	
G102 .....	Behind instrument cluster .....	202-1

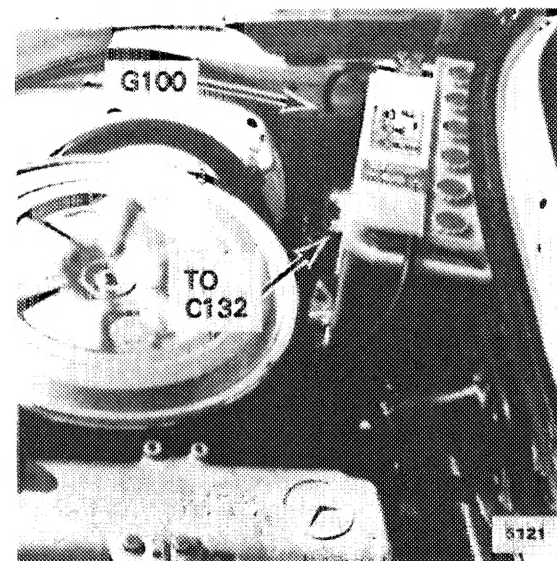


Figure 1 - Ahead of Battery

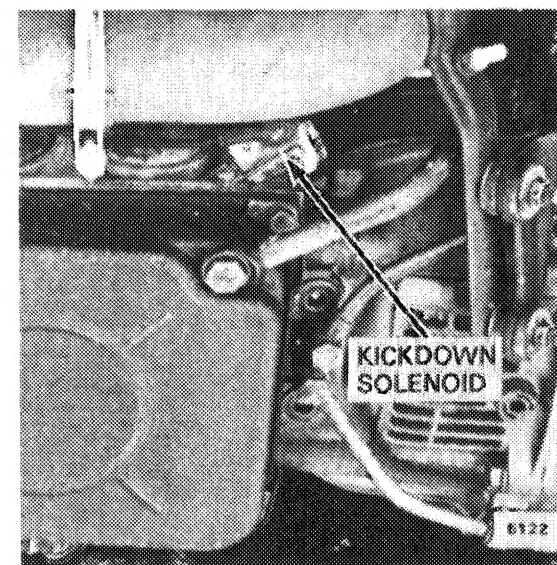


Figure 2 - RH Side of Automatic Transmission

## COMPONENT LOCATIONS

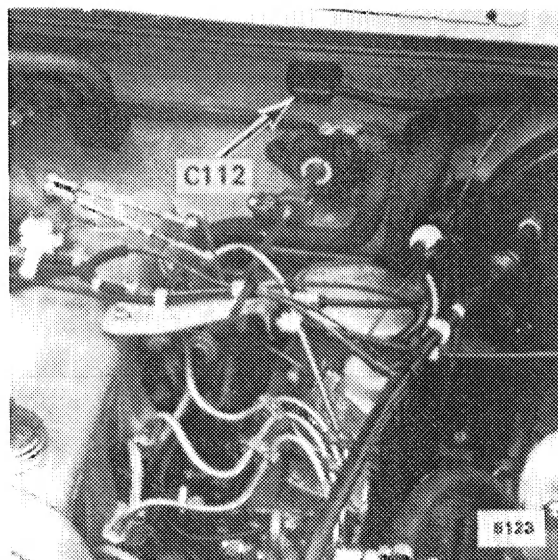


Figure 1 - To Right of Power Brake Booster

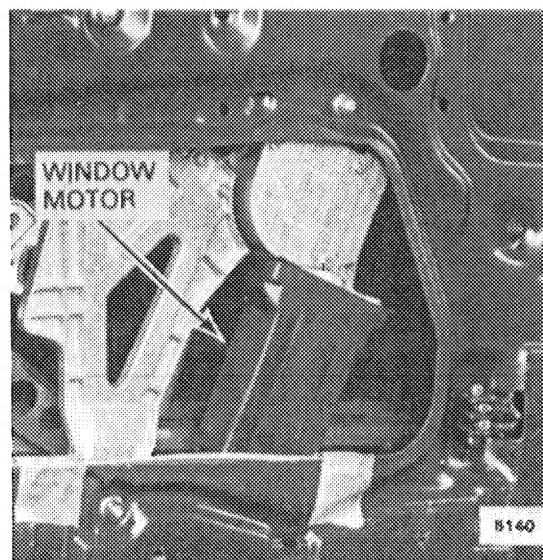


Figure 2 - Driver's Door

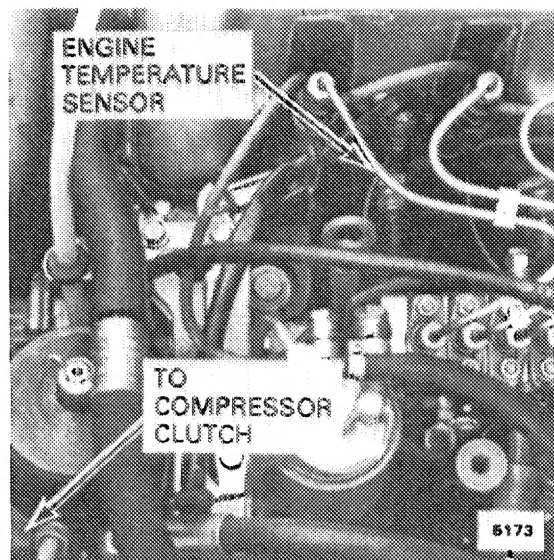


Figure 3 - Front LH Side of Engine

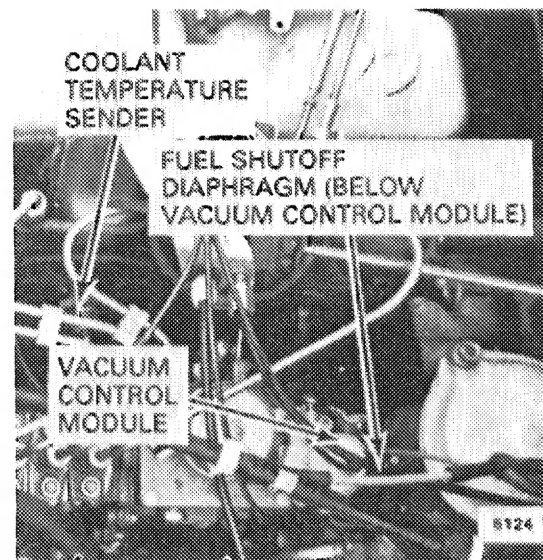


Figure 4 - Rear LH Side of Engine



## COMPONENT LOCATIONS

208  
240  
D

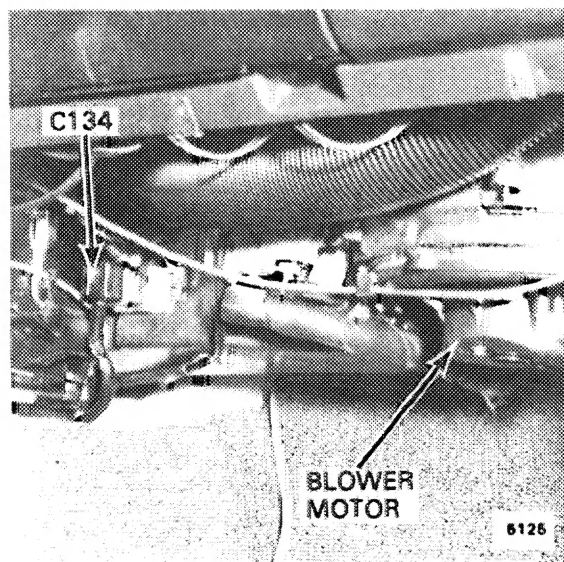


Figure 1 - Under RH Side of Instrument Panel

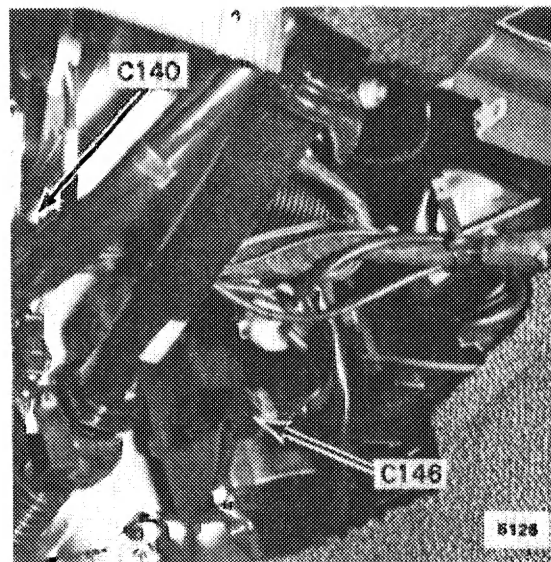


Figure 2 - To Right of Steering Column

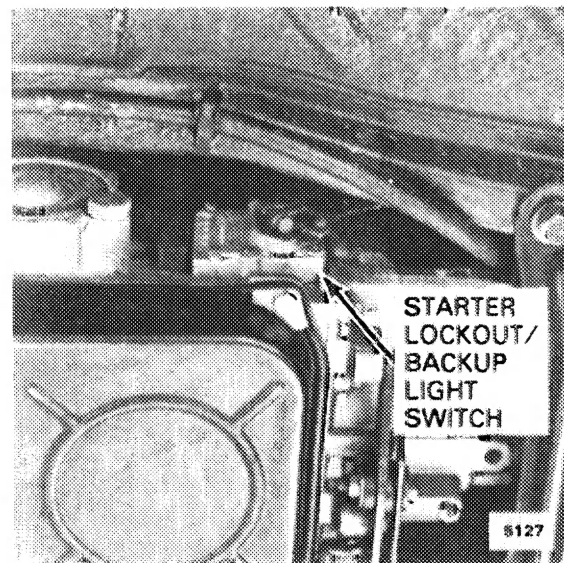


Figure 3 - LH Side of Automatic Transmission

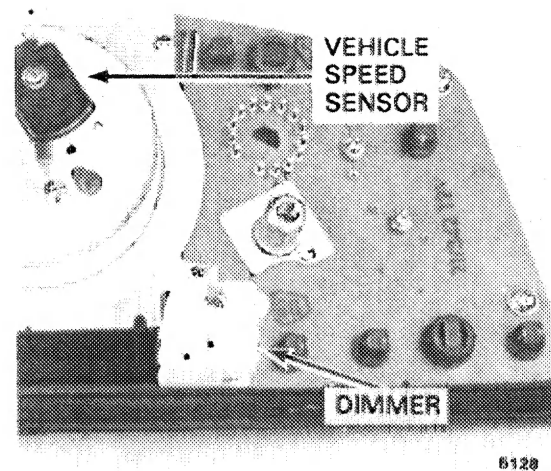


Figure 4 - Back of Instrument Cluster